

SENSORS



TX10-2



TX21-IT



TX25-IT



TX27-IT



TX29-IT



TX29DTH-IT



TX33-IT



TX35-IT



TX35DTH-IT



TX37-IT



TX38-IT
TX38WD-IT
TX38HC-IT



TX40-IT



TX45-IT



TX52D-IT



TX70-DTH



TX80



TX80-TH



TX96-TH (TW003)



TX96 (TW004)



TX97



TX97-TH



TX104



TX105




TX108



TX108-DTH

SENSORS

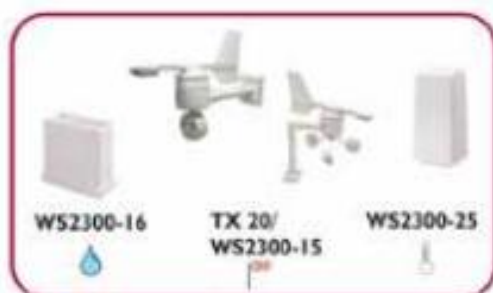

Bezeichnung	Frequenz	Stationen
TX10-2	433MHz	WS 6441
TX20 (Windsensor)	433 MHz	WS 2300, WS 2307
TX21-IT	868 MHz	WS 9032-IT (auch TX29DTH-IT)
TX22 (1600-25)	868 MHz	WS 1600-IT
TX23 (Windsensor)	868 MHz	WS 1600-IT
TX24-IT	868 MHz	WS 9004-IT
TX25-IT	868 MHz	WS 8301-IT
TX26 (Regensensor)	868 MHz	WS 1600-IT
TX27-IT	868 MHz	WS 9620-IT, WS 9720-IT
TX29-IT	868 MHz	MA 10430, WS 7014-IT, WS 7394-IT (bis 6N11), WS 9117-IT, WS 9122-IT WS 9162-IT, WS 9611-IT, WS 9723-IT, WS 9750-IT, WS 9756-IT
TX29DTH-IT	868 MHz	MA 10410, MA 10901, MA 10920, WS 9624-IT, WS 7018-IT, WS 9040-IT, WS 9032-IT
TX33-IT	868 MHz	WS 9069-IT
TX35-IT	868 MHz	WD 450, WD 1080, WD 1120, WD 1202, WD 1800, WD 2101, WD 2102, WD 2900, WD 2950, WD 4000, WD 4001, WD 4002, WD 4003, WD 4025, WD 4026, WD 4027, WD 4930, WD 6000, WD 6003, WD 6005, WD 9530, WD 9535, WD 9550
TX35DTH-IT	868 MHz	WD 4204, WD 4910, WD 4920, WD 9000, WD 9245, WD 9542
TX37-IT	868 MHz	WS 9632-IT, WS 8118-IT, WS 8117-IT, WS 9140-IT, WS 9130-IT
TX38-IT	868 MHz	WM 5012, WM 5412
TX38WD-IT	868 MHz	WD 1070, WD 4005, WD 4008, WD 9565
TX40-IT	868 MHz	WS 9215-IT, WS 9245-IT, WS 9136-IT
TX45-TH	868 MHz	WS 9257-IT, WS 9273-IT, WS 9274-IT
TX47-IT	868 MHz	WL 2000
TX48WD-IT	868 MHz	WD 4012, WD 4017, (kompatibel zum TX35-IT)
TX51-IT	868 MHz	MA 10450
TX52D-IT	868 MHz	WS 9069-IT
TX56-IT (Windsensor)	868 MHz	WS 2800-IT
TX57-IT (Regensensor)	868 MHz	WS 2800-IT
TX58-IT (Regensensor)	868 MHz	WS 2816-IT
TX59-IT (Thermo-Hygro)	868 MHz	WS 2800-IT
TX59N-IT (Thermo-Hygro)	868 MHz	WS 2816-IT
TX63-IT (Windsensor)	868 MHz	WS 2816-IT
TX70DTH	433 MHz	WS 6750, WS 6760, WS 6765
TX80	433 MHz	WS 6710
TX80-TH	433 MHz	WS 6730, WS 9480
TX96(TW004)	433 MHz	WS 6720, WS 6810, WS 6812, WS 6815, WS 6820, WS 6830, WS 6832, WS 9118 (ab 5N11) (Stationen auch kompatibel zu TX97 und TX96-TH)
TX96-TH (TW003)	433 MHz	WS 6440
TX97	433MHz	WS 6832, WS 9114
TX97-TH	433MHz	WS 6445, WS 6447, (kompatibel zum TX96-TH)
TX104	433 MHz	WS 9135, WS 9170, WS 9180
TX105	433 MHz	WS 6840
TX105TH	433MHz	WS 7060
TX108	433 MHz	WS 9250, WS 9251, WS 9260, WT 529
TX108DTH	433 MHz	WS 8011, WS 9252
TX173, TX174, TX175	433MHz	WS 1700
TX190	868 MHz	WS 1900
TX205	433 MHz	WS 8119, WS 9132, WS 9175, WS 9612
TX205-DTH	433 MHz	WS6462, WS 9060, WS 9065, WS 9255
TX206	433 MHz	WS 6448
TX302	433 MHz	WS 6501
TX303	433 MHz	WS 6502
TX643	433 MHz	WT 643
TX923	433 MHz	WS 9008
TX960	433 MHz	WS 9767
TX960-TH	433 MHz	WS 6442, WS 6449, WS6762, WS 6767, WS 6870, WS 9490
TX5000	433 MHz	WM 5200
TX5003	433 MHz	WM 5300
TX6600-1	433 MHz	WS 6600, WS 6620
TX6600-2	433 MHz	WS 6650
TX6600-3	433 MHz	WS 6740
TX6610	433 MHz	WS 6610
TX9007	433 MHz	WS 9007
TX9116	433 MHz	WS 9116
2300-15 (Windsensor)	433 MHz	WS 2300, WS 2307
2300-16 (Regensensor)	433 MHz	WS 2300, WS 2307
2300-25 (Thermo-Hygro)	433 MHz	WS 2300, WS 2307