

## NOTICE DE MONTAGE

**SAUTE-VENT ERMAX**  
**ADAPTABLE SUR YAMAHA MT 125 2014 → ∞**  
Durée estimée de montage : 25 mn

### Kit de fixation


- 4 vis acier BHC 4x25
- 4 inserts caoutchouc Ø4
- 4 rondelles plastique Ø4
- 4 entretoises plastique Ø6x10
- 2 butées caoutchouc autocollantes

### Montage

- Démontez le cache compteur.
- Enlever les 4 agrafes filetées et repercer les trous d'origine en Ø8 (voir photo ci-dessous). **ATTENTION QUE LA MECHE NE S'ENGAGE PAS ET NE VIENNE PAS ABIMER LE COMPTEUR.**



- Mettre les 4 inserts Ø4 dans les trous reperçés en Ø8.
- Monter le saute-vent sans le serrer, en intercalant les entretoises entre celui-ci et les inserts Ø4. Vérifier le centrage du saute-vent, puis serrer les 4 vis.
- Mettre les 2 butées caoutchouc entre le saute vent et le cache pour éviter les vibrations.

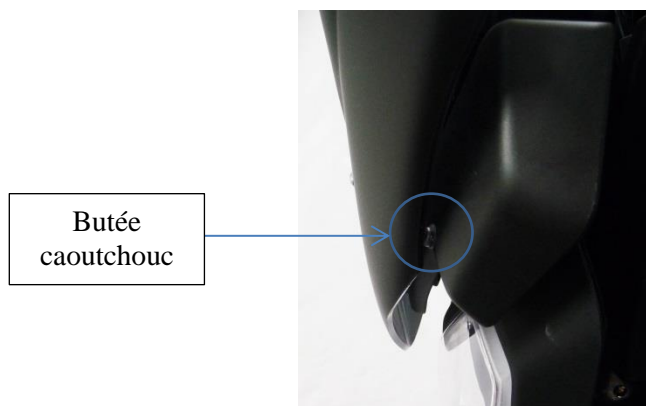

### « ATTENTION »

- \* Tout accessoire monté ne sera plus considéré comme neuf et ne sera **ni repris ni échangé**.
- \* Les accessoires Ermax sont conçus pour des **montes d'origine**. Ils ne seront pas garantis s'ils sont utilisés dans d'autres conditions.
- \* En raison des tolérances de fabrication des véhicules, indépendantes de notre volonté, certains produits Ermax peuvent nécessiter des ajustements lors de la fixation.
- \* Les marques de fabricant de motos citées sont indiquées exclusivement comme référence nécessaire à la destination des accessoires Ermax.
- \* Attention aux serrages excessifs qui pourraient abîmer ou casser nos accessoires en plastique et les vis en aluminium.
- \* Les bulles abîmées par un **lavage inadéquat** ne sont pas garanties (dissolvant, essence, détergent, produits abrasifs, corrosifs...). Essuyer immédiatement les liquides de frein ou de batterie qui pourraient déborder sur les accessoires.

## FITTING INSTRUCTIONS

### **NOSE SCREEN ERMAX** **ADAPTABLE ON YAMAHA MT 125 2014 → ∞** Estimated fitting time : 25 mn

#### Fitting kit


- 4 steel screws BHC 4x25
- 4 plastic washers Ø4
- 2 adhesive rubber bumpers
- 4 rubber inserts Ø4
- 4 plastic spacers Ø6x10

#### Fitting instructions

- Remove the meter cover.
- Remove the 4 threaded fasteners and enlarge the original holes in Ø8 (see pictures below). **PAY ATTENTION THE DRILL DOES NOT ENTER TOO FAR AND DOES NOT DAMAGE THE METER.**



- Place the 4 inserts Ø4 into holes enlarged in Ø8.
- Fit the nose screen without tightening, by inserting spacers between the nose screen and inserts Ø4. Control the nose screen is well center and then tighten the 4 screws.
- Place both rubber bumpers between the nose screen and the cover to avoid vibrations.

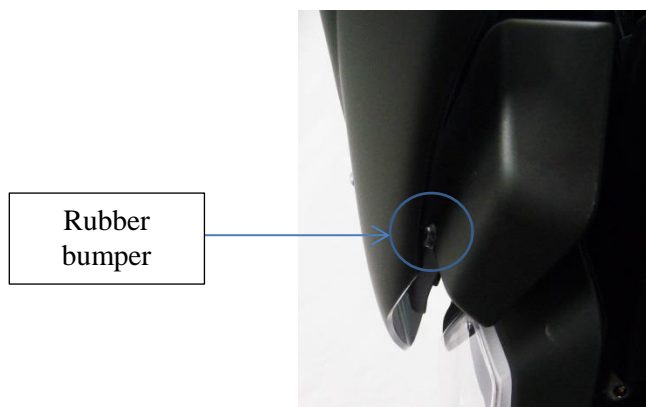

#### « CAUTION »

- \* Accessories gone up on the motorbike will not be any more considered as new and will be **neither retaken nor exchanged**.
- \* Ermax accessories are foreseen for **original equipments**. They will not be guaranteed if they are used in others conditions.
- \* Due to vehicles made tolerances, beyond our control, some Ermax products might need adjustings to fit.
- \* The mentioned label of motorbikes's manufacturers are indicated exclusively as a reference to Ermax accessories.
- \* Care to excessive clampings which may damage or break our plastic accessories and aluminium screws.
- \* Screens damaged by an **inadequat washing** are not guaranteed (abrasive, corrosive ... products, solvent, thinner, benzine ...). Wash immediately brake or battery fluid which may flow on accessories.